




Stretch Fabric Wall

Quick Instructions



Step 1

Lay out all the frame poles according to size. Grab the 2 large frame poles and 1 frame connector.

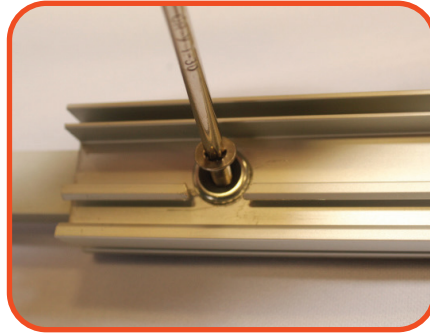


Step 2

Remove the screws and washers on the frame connector and slide the connector through the opening in the frame, lining up the screw hole.




Step 3

Place a screw and a washer in the screw hole and tighten. Repeat for the other frame bar. Make sure the angle on the frame bars are on each side.

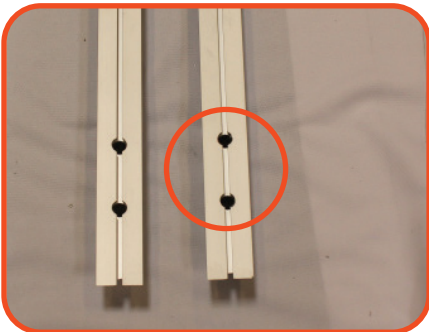

Step 4

Grab 1 medium frame bar with feet drill holes on the side and one regular medium bar without feet drill holes.

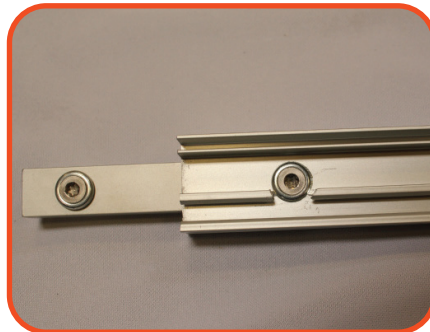

Step 5

Grab 1 connector and remove the screws and washers on the frame connector and slide the connector through the opening in the frame lining up the screw hole.



Step 6

Place a screw and a washer in the screw hole and tighten. Repeat for the other frame bar. Make sure the angle on the frame bars are on each side. Repeat this step for the other 2 medium frame poles.



Step 7

Grab 2 screw curved corner brackets and 1 flat corner bracket, un-tightening the screws a little so the flat corner bracket and the screw corner bracket are flat enough to insert into the angled corners of the frame bars.



Step 8

Make sure the screws are faced out from the frame and the flat edge of the frame is lined up. After inserting the curved corner brackets and connecting the frame bars together, tighten the screws to ensure a tight fit.




Step 9

Repeat steps 7 & 8 for all corners, making sure the flat edge of the frame is lined up and that all screws are tight.




Stretch Fabric Wall


Wall Mount Instructions

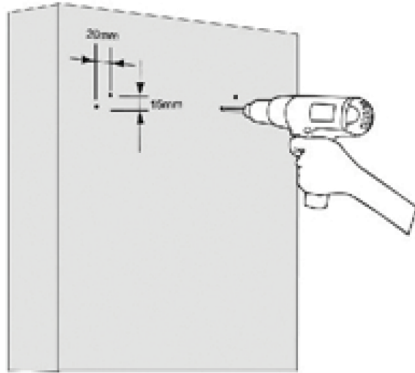


Position the wall mounts on the wall close enough for the threaded screw to be able to apply pressure to the frame. Space them evenly across the top and bottom edges of the inside edges of the frame. Mark the hole locations with a pen or marker and drill holes large enough to fit the plastic screw anchors.

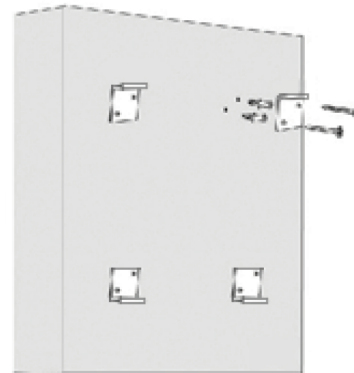

Insert wall anchors into holes, place wall mount over wall anchors making sure holes on mounts line up with anchors. Insert screws into holes and tighten them with a screwdriver to secure.

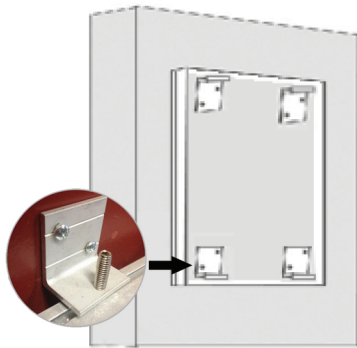

Tighten allen key screws on wall mounts to apply pressure to the frame. Repeat for all wall mounts to secure frame to the wall.

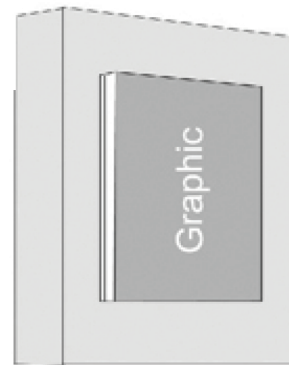

Install your graphic by tucking the silicone beading into each corner of the frame and then working your way around the edges of the frame to complete graphic installation.